




ThermalDESIGNS[®]

1880 South Flatiron Ct.
Boulder, CO 80301
866-442-3485 fx 303-442-3520
www.thermaldesignsinc.com
sales@thermaldesignsinc.com

INSTALLATION INSTRUCTIONS FOR ADD-ON-TRACK MANUAL SHADES



1. INSTALL THE TRACK

- On curved units, track is pre-bent and pre-drilled with countersunk holes for mounting.
- If using track mounting brackets, attach to track first.
- **START AT BOTTOM:** For curved units, check the radius fit of the first track. If necessary trim the bottom of track to improve the fit.
- Use the 1/8" bit provided to drill mounting screw holes into glazing bars. Attach the track or track brackets using the screws provided.
- On curved track, after attaching the screw at bottom of radius, you may need to manually force track into place.
- Use 2 washers with screws in the top and bottom hole of each track to keep shade gliders from falling out of track during operation.
- Make sure all screw heads are properly seated flush with track in countersunk holes.

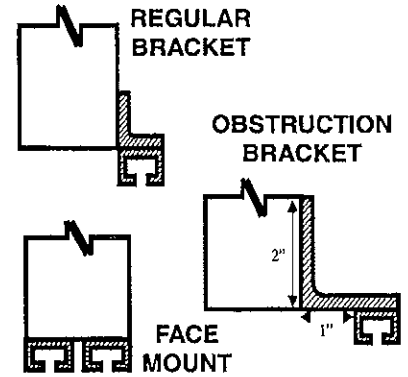



2. INSTALL HEADRAILS

- Attach headrails directly below glazing bars at ridge by screwing into back wall or beam. Pre-drilled mounting holes in headrail will indicate the headrail orientation.

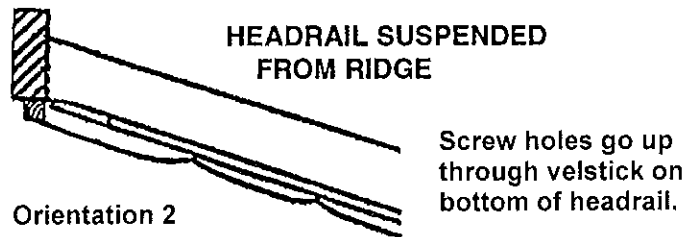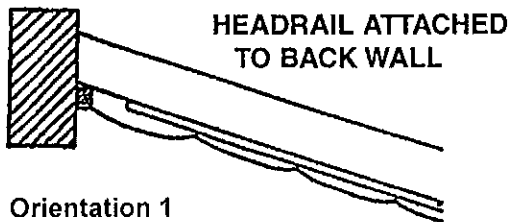


3. INSTALL SHADES IN TRACK

- Shades are labelled in alpha order from left to right, inside looking out, unless they are all the same size.
- **START LOADING SHADES AT LOWER END OF TRACK**, starting with the bottom edge of shade where pull cords are attached.
- Begin with bottom glider by holding back of shade near the glider with one hand and inserting it into the track with thumb on other hand.
- Twist glider into place by gripping it by its axle with needle-nose pliers until glider "snaps" into place.
- Liberally coat inside of track with silicone spray. Spray up and down the length of the track.
- Carefully observe shade travel in track. Lift shade through track a few times by lifting on top shade pleat.
- If shade catches, check for obstructing screw holes (reseat), crimped track in radius (open with pry bars), or spray more silicone.

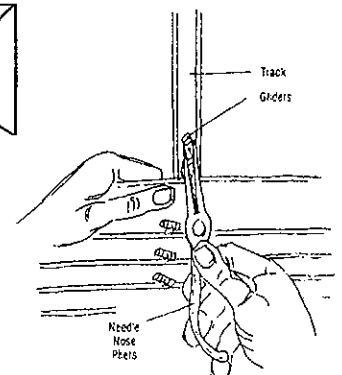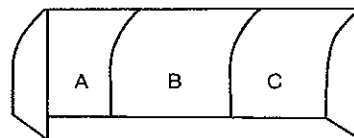

4. CORDS

- Untie pull cords and drape them over top of shade.
- While holding onto cords and top pleat of shade, carefully lift shade to ridge and attach the spring clamp to one of the tracks underneath the top shade glider and pleat. This will hold the shade up while working with the cords.
- Guide pull cords on shades through their respective pulleys on the headrail and then laterally through the cheek block at the end of headrail. (Figure 1)

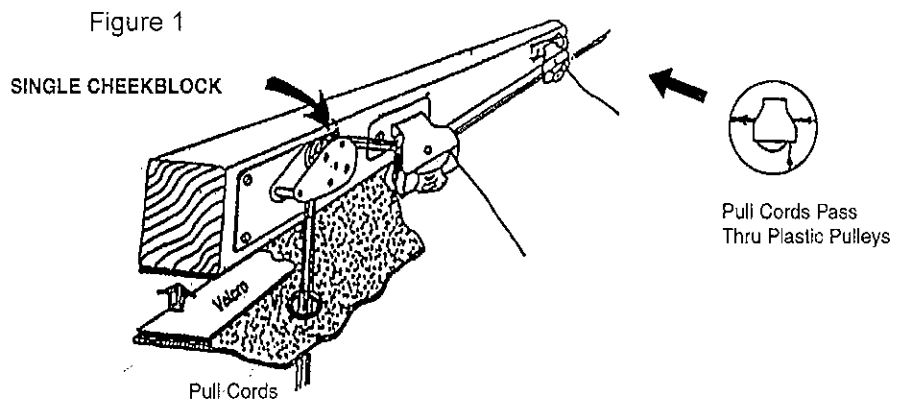


- For multiple shades, if all shades are to operate together, all pull cords pass through each pulley and through the cheek block on outside edge of the end headrail. (Figure 1)

- For multiple shades that will pull together in different groups, double or triple cheek blocks are used for each group of pull cords. (Figure 2)
- Run cords from groups of shades that are furthest from the cheek block first through their own pulleys, then through screw eyes on adjoining headrails, then through the inside wheel of the cheek block. The outer wheel on cheek block is for cords from the closest group of

- Run all cords through the grommet hole in shade underneath cheekblock.
- Attach velcro on top pleat of shade to black velstick on underside of headrail.
- Remove clamp from track.

5. FINAL STEPS

- With shades lowered (FULLY EXTENDED), cut excess cord to desired length.
- With each set of pull cords, tie a knot 4" below grommet hole in shade
- Slip a tassel onto cord set and tie a knot at the bottom of cords.
- Mount cord cleats at desired wall location about 12" apart so that cords can be neatly wrapped using both cleats.
- Shade pleats should line up across shades. If they do not, minor adjustments to the location of the velstick on the headrails can be made.

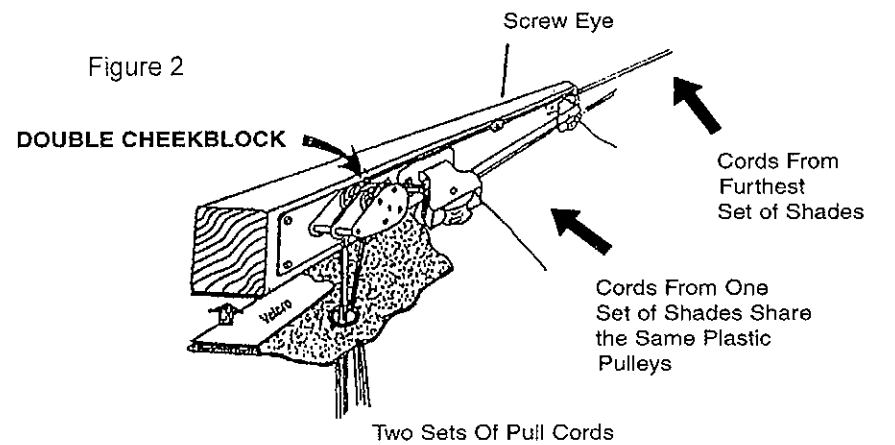

Wrap cords around both line cleats to keep them neat when shades are pulled up.

