





ThermalDESIGNS.

1880 South Flatiron Ct.
Boulder, CO 80301
866-442-3485 fx 303-442-3520
www.thermaldesignsinc.com
sales@thermaldesignsinc.com

Installation Instructions For Four Seasons® Wand Shades (for low pitch models only)


1. Install the Shades into Track

- Shades are labelled in alpha order from left to right (inside of room looking out), unless they are all the same size.
- Clean dirt and debris from track. Use brush provided or other soft material. Do not use tools that can scratch track surfaces.
- If installing from a ladder, rest the rolled-up shade on top to hold it while loading into track. The shipping boxes with sides cut off may make a convenient tray for this.
- On aluminum models, load shade wheels through existing track cut-outs near the ridge. If cut-outs aren't present, drill them out using a 5/16" drill bit, 3 1/2" inches below the ridge. On wood models, remove the access inserts near the ridge first.
- If your installation includes both a "lower" and "upper" shade to be loaded into a single bay, install the lower one first through the track cut-outs.
- After loading shade, attach shade stop screws just below each access opening. Pre-drill holes using 1/8" bit provided. Shade stops are not needed for a "lower" shade. Attach stop screws at same location in each track for every shade.

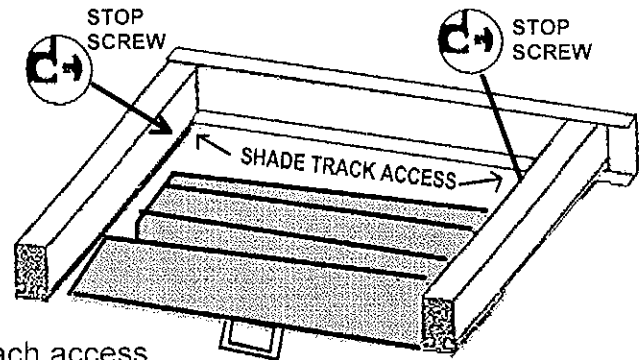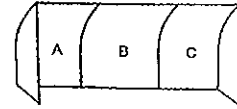


2. Install Headrails

- Attach headrails directly below glazing bars by screwing them into back wall or under ridge. The velstick side, where top shade pleat attaches, will face down. Screw hole placement will indicate mounting point options:

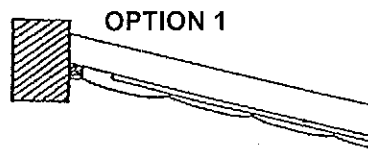

Headrail attached to back wall.

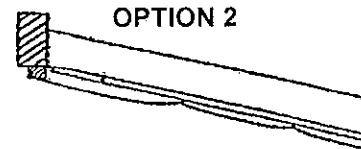

Headrail suspended from ridge. Screw holes go up through velstick on bottom of headrail.

- Headrails with slotted brackets are designed for inside mount between glazing bars. The slotted bracket is adjustable if necessary by loosening the screw attaching it to the headrail. Pre-drill attachment holes into glazing bars with 1/8" bit and use 1/2" tapping screws provided to mount these headrails.

- Attach velcro on shades to velstick on headrails.

3. Wand

- Use wand gently against shade handle to operate shades.